


DIGITAL OUTSIDE CALIPER INSTRUCTION MANUAL

To ensure the proper use of the product, please read this product instructions manual thoroughly.

CALIPER COMPONENTS

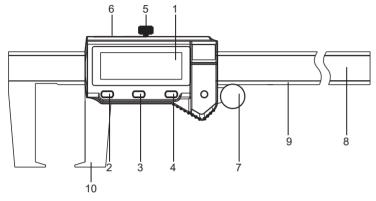

- 1. LCD display: Displays measurement value.
- ON/OFF button: Press and release to power on/off the caliper. Caliper defaults to "absolute measuring mode" (ABS) when powered on.
- 3. mm/inch switch: Press this button to change between inch to metric.
- 4. Zero button: Press to set zero.
- 5. Clamp screw
- 6. Battery cover
- 7. Thumb wheel
- 8. Scale
- 9. Beam
- 10. Measuring faces: Measures dimensions such as outer diameter, thickness, contours, and various features on the exterior surface of an object.

SET UP


Press the power button. If display does not show a value, check condition of the battery.

- 1. Rotate the locking screw counterclockwise to unlock the caliper.
- 2. Clean the measuring surfaces of the jaws.
- 3. Close the jaws.
- 4. Press the power button, and set the zero position.
- 5. The caliper is ready to measure parts of the following example:

DIGITAL OUTSIDE CALIPER



EXAMPLE

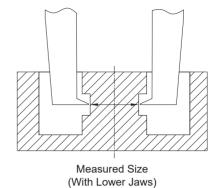

PRODUCT SPECIFICATIONS

Measuring range	0-150mm(0-6"), 0-200mm(0-8"), 0-300mm(0-12"),
Resolution	0.01mm/0.0005"/ 1/128"
Battery	CR2032 lithium battery
Working temperature	0-40°C (32 to 104°F)
Storage	-10 to 60°C (-14 to 140°F)
Environmental humidity	<80%



CAUTIONS

- 1. Avoid contact with liquid, prolonged exposure to sunlight or heat, and high impacts, such as dropping or items falling on the caliper.
- 2. Do not charge and reuse the battery. Properly dispose of old battery and replace with a new one when power is low.
- 3. Keep the caliper clean to ensure accuracy and long life. Clean with a clean soft cloth after each use.
- 4. Remove the battery if the product will not be used for a long period of time.
- 5. Do not disassemble.

TROUBLESHOOTING

If values on screen are dim or flashing, replace the battery with a new one.