



# Technical Details

1.4 to 6.0 Inches 09-0393			
Small Fulcrum Head			
Measuring Range	Anvil	Washer	
1.40	1.42	1.4	
1.42	1.44	1.4	.02
1.44	1.46	1.4	.04
1.46	1.48	1.4	.02 + .04
1.48	1.50	1.4	.08
1.50	1.52	1.4	.08 + .02
1.52	1.54	1.4	.12
1.54	1.56	1.4	.12 + .02
1.56	1.58	1.4	.12 + .04
1.58	1.60	1.4	.12 + .04 + .02
1.60	1.62	1.6	
1.62	1.64	1.6	.02
1.64	1.66	1.6	.04
1.66	1.68	1.6	.02 + .04
1.68	1.70	1.6	.08
1.70	1.72	1.6	.08 + .02
1.72	1.74	1.6	.12
1.74	1.76	1.6	.12 + .02
1.76	1.78	1.6	.12 + .04
1.78	1.80	1.6	.12 + .04 + .02
1.80	1.82	1.8	
1.82	1.84	1.8	.02
1.84	1.86	1.8	.04
1.86	1.88	1.8	.02 + .04
1.88	1.90	1.8	.08
1.90	1.92	1.8	.08 + .02
1.92	1.94	1.8	.12
1.94	1.96	1.8	.12 + .02
1.96	1.98	1.8	.12 + .04
1.98	2.00	1.8	.12 + .04 + .02
2.00	2.02	2.0	
2.02	2.04	2.0	.02

1.4 to 6.0 Inches 09-0393			
Small Fulcrum Head			
Measuring Range	Anvil	Washer	
2.04	2.06	2.0	.04
2.06	2.08	2.0	.02 + .04
2.08	2.10	2.0	.08
2.10	2.12	2.0	.08 + .02
2.12	2.14	2.0	.12
2.14	2.16	2.0	.12 + .02
2.16	2.18	2.0	.12 + .04
2.18	2.20	2.0	.12 + .04 + .02
Large Fulcrum Head			
Measuring Range	Anvil	Washer	
2.00	2.02	2.0	
2.02	2.04	2.0	.02
2.04	2.06	2.0	.04
2.06	2.08	2.0	.02 + .04
2.08	2.10	2.0	.08
2.10	2.12	2.0	.08 + .02
2.12	2.14	2.0	.12
2.14	2.16	2.0	.12 + .02
2.16	2.18	2.0	.12 + .04
2.18	2.20	2.0	.12 + .04 + .02

1.4 to 6.0 Inches 09-0393			
Large Fulcrum Head			
Measuring Range	Anvil	Washer	
2.44	2.46	2.4	.04
2.46	2.48	2.4	.02 + .04
2.48	2.50	2.4	.08
2.50	2.52	2.4	.08 + .02
2.52	2.54	2.4	.12
2.54	2.56	2.4	.12 + .02
2.56	2.58	2.4	.12 + .04
2.58	2.60	2.4	.12 + .04 + .02
2.60	2.62	2.6	
2.62	2.64	2.6	.02
2.64	2.66	2.6	.04
2.66	2.68	2.6	.02 + .04
2.68	2.70	2.6	.08
2.70	2.72	2.6	.08 + .02
2.72	2.74	2.6	.12
2.74	2.76	2.6	.12 + .02
2.76	2.78	2.6	.12 + .04
2.78	2.80	2.6	.12 + .04 + .02
2.80	2.82	2.8	
2.82	2.84	2.8	.02
2.84	2.86	2.8	.04
2.86	2.88	2.8	.02 + .04
2.88	2.90	2.8	.08
2.90	2.92	2.8	.08 + .02
2.92	2.94	2.8	.12
2.94	2.96	2.8	.12 + .02
2.96	2.98	2.8	.12 + .04
2.98	3.00	2.8	.12 + .04 + .02
3.00	3.02	3.0	
3.02	3.04	3.0	.02
3.04	3.06	3.0	.04
3.06	3.08	3.0	.02 + .04

1.4 to 6.0 Inches 09-0393			
Large Fulcrum Head			
Measuring Range	Anvil	Washer	
3.08	3.10	3.0	.08
3.10	3.12	3.0	.08 + .02
3.12	3.14	3.0	.12
3.14	3.16	3.0	.12 + .02
3.16	3.18	3.0	.12 + .04
3.18	3.20	3.0	.12 + .04 + .02
3.20	3.22	3.2	
3.22	3.24	3.2	.02
3.24	3.26	3.2	.04
3.26	3.28	3.2	.02 + .04
3.28	3.30	3.2	.08
3.30	3.32	3.2	.08 + .02
3.32	3.34	3.2	.12
3.34	3.36	3.2	.12 + .02
3.36	3.38	3.2	.12 + .04
3.38	3.40	3.2	.12 + .04 + .02
3.40	3.42	3.4	
3.42	3.44	3.4	.02
3.44	3.46	3.4	.04
3.46	3.48	3.4	.02 + .04
3.48	3.50	3.4	.08
3.50	3.52	3.4	.08 + .02
3.52	3.54	3.4	.12
3.54	3.56	3.4	.12 + .02
3.56	3.58	3.4	.12 + .04
3.58	3.60	3.4	.12 + .04 + .02
3.60	3.62	3.6	
3.62	3.64	3.6	.02
3.64	3.66	3.6	.04
3.66	3.68	3.6	.02 + .04
3.68	3.70	3.6	.08
3.70	3.72	3.6	.08 + .02



# Technical Details

1.4 to 6.0 Inches 09-0393			
Large Fulcrum Head			
Measuring Range	Anvil	Washer	
3.72	3.74	3.6	0.12
3.74	3.76	3.6	.12 + .02
3.76	3.78	3.6	.12 + .04
3.78	3.80	3.6	.12 + .04 + .02
3.80	3.82	3.8	
3.82	3.84	3.8	0.02
3.84	3.86	3.8	0.04
3.86	3.88	3.8	.02 + .04
3.88	3.90	3.8	0.08
3.90	3.92	3.8	.08 + .02
3.92	3.94	3.8	0.12
3.94	3.96	3.8	.12 + .02
3.96	3.98	3.8	.12 + .04
3.98	4.00	3.8	.12 + .04 + .02
4.00	4.02	4.0	
4.02	4.04	4.0	0.02
4.04	4.06	4.0	0.04
4.06	4.08	4.0	.02 + .04
4.08	4.10	4.0	0.08
4.10	4.12	4.0	.08 + .02
4.12	4.14	4.0	0.12
4.14	4.16	4.0	.12 + .02
4.16	4.18	4.0	.12 + .04
4.18	4.20	4.0	.12 + .04 + .02
Large Fulcrum Head with 2" Sub Rod			
Measuring Range	Anvil	Washer	
4.20	4.22	2.2	
4.22	4.24	2.2	0.02
4.24	4.26	2.2	0.04
4.26	4.28	2.2	.02 + .04
4.28	4.30	2.2	0.08
4.30	4.32	2.2	.08 + .02

1.4 to 6.0 Inches 09-0393			
Large Fulcrum Head with 2" Sub Rod			
Measuring Range	Anvil	Washer	
4.32	4.34	2.2	0.12
4.34	4.36	2.2	.12 + .02
4.36	4.38	2.2	.12 + .04
4.38	4.40	2.2	.12 + .04 + .02
4.40	4.42	2.4	
4.42	4.44	2.4	0.02
4.44	4.46	2.4	0.04
4.46	4.48	2.4	.02 + .04
4.48	4.50	2.4	0.08
4.50	4.52	2.4	.08 + .02
4.52	4.54	2.4	0.12
4.54	4.56	2.4	.12 + .02
4.56	4.58	2.4	.12 + .04
4.58	4.60	2.4	.12 + .04 + .02
4.60	4.62	2.6	
4.62	4.64	2.6	0.02
4.64	4.66	2.6	0.04
4.66	4.68	2.6	.02 + .04
4.68	4.70	2.6	0.08
4.70	4.72	2.6	.08 + .02
4.72	4.74	2.6	0.12
4.74	4.76	2.6	.12 + .02
4.76	4.78	2.6	.12 + .04
4.78	4.80	2.6	.12 + .04 + .02
4.80	4.82	2.8	
4.82	4.84	2.8	0.02
4.84	4.86	2.8	0.04
4.86	4.88	2.8	.02 + .04
4.88	4.90	2.8	0.08
4.90	4.92	2.8	.08 + .02
4.92	4.94	2.8	0.12
4.94	4.96	2.8	.12 + .02

1.4 to 6.0 Inches 09-0393			
Large Fulcrum Head with 2" Sub Rod			
Measuring Range	Anvil	Washer	
4.96	4.98	2.8	.12 + .04
4.98	5.00	2.8	.12 + .04 + .02
5.00	5.02	3.0	
5.02	5.04	3.0	0.02
5.04	5.06	3.0	0.04
5.06	5.08	3.0	.02 + .04
5.08	5.10	3.0	0.08
5.10	5.12	3.0	.08 + .02
5.12	5.14	3.0	0.12
5.14	5.16	3.0	.12 + .02
5.16	5.18	3.0	.12 + .04
5.18	5.20	3.0	.12 + .04 + .02
5.20	5.22	3.2	
5.22	5.24	3.2	0.02
5.24	5.26	3.2	0.04
5.26	5.28	3.2	.02 + .04
5.28	5.30	3.2	0.08
5.30	5.32	3.2	.08 + .02
5.32	5.34	3.2	0.12
5.34	5.36	3.2	.12 + .02
5.36	5.38	3.2	.12 + .04
5.38	5.40	3.2	.12 + .04 + .02
5.40	5.42	3.4	
5.42	5.44	3.4	0.02
5.44	5.46	3.4	0.04
5.46	5.48	3.4	.02 + .04
5.48	5.50	3.4	0.08
5.50	5.52	3.4	.08 + .02
5.52	5.54	3.4	0.12
5.54	5.56	3.4	.12 + .02
5.56	5.58	3.4	.12 + .04
5.58	5.60	3.4	.12 + .04 + .02

1.4 to 6.0 Inches 09-0393			
Large Fulcrum Head with 2" Sub Rod			
Measuring Range	Anvil	Washer	
5.60	5.62	3.6	
5.62	5.64	3.6	0.02
5.64	5.66	3.6	0.04
5.66	5.68	3.6	.02 + .04
5.68	5.70	3.6	0.08
5.70	5.72	3.6	.08 + .02
5.72	5.74	3.6	0.12
5.74	5.76	3.6	.12 + .02
5.76	5.78	3.6	.12 + .04
5.78	5.80	3.6	.12 + .04 + .02
5.80	5.82	3.8	
5.82	5.84	3.8	0.02
5.84	5.86	3.8	0.04
5.86	5.88	3.8	.02 + .04
5.88	5.90	3.8	0.08
5.90	5.92	3.8	.08 + .02
5.92	5.94	3.8	0.12
5.94	5.96	3.8	.12 + .02
5.96	5.98	3.8	.12 + .04
5.98	6.00	3.8	.12 + .04 + .02
6.00	6.02	4.0	
6.02	6.04	4.0	0.02
6.04	6.06	4.0	0.04
6.06	6.08	4.0	.02 + .04
6.08	6.10	4.0	0.08
6.10	6.12	4.0	.08 + .02
6.12	6.14	4.0	0.12
6.14	6.16	4.0	.12 + .02
6.16	6.18	4.0	.12 + .04
6.18	6.20	4.0	.12 + .04 + .02